## REQUIREMENT OF USE & MAINTENANCE

- Please be careful to open the packaging, install and clean products to avoid surface
- ♦Please use water or neutral detergent to clean the surface of products, and then dry them by the soft towel.
- ♦Do not use detergent containing scouring powder, polishing powder, or any corrosive substance, or rough cloth to clean the products
- ♦When you use acidic (alkaline) detergent to clean the objects beside products, it may damage the surface of products, please exercise extra caution.
- ♦To be suggesting cleaning products regularly to maintain the product appearance bright permanently.

## RECOMMENDED TOOLS



IMPACT DRILL



**ALLEN KEY** 



SLOT TYPE SCREWDRIVER PHILIP'S TYPE SCREWDRIVER



**TAPELINE** 

## INSTALLATION







1. Take the round transparent plastic from package, and cut out the middle elliptical part.



2. Backout the bottom screw of clothesline, and take out the support.



3. Put the support on the wall, and draw the mounting holes for installation.



4. Drill the suited mounting holes for plastic fixing.





8. Take another support from

package, and draw the mounting holes on the wall.

5. Put the expansion bolt in the mounting holes.



6. Fix the round transparent plastic and support on the wall. (The support should press the plastic on the wall.)



7. Put the clothesline to the support, and fix the bottom screw tightly.



9. Drill the suited mounting holes 10. Put the expansion bolt in the for plastic fixing.

mounting holes.

11. Fix another support and the elliptical transparent plastic on the wall. (The support should press the plastic on the wall.)

\_\_\_\_\_\_\_\_