


19764



DE	MONTAGEANLEITUNG:	ABLAUFGARNITUR FÜR DUSCHWANNEN
GB	INSTALLATION INSTRUCTIONS:	SCHOWER WASTE AND TRAP
FR	NOTICE DE MONTAGE:	SIPHON POUR RECEVEUR
CZ	NÁVOD K MONTÁŽI:	VANIČKOVÝ SIFON
PL	INSTRUKCJA MONTAŻU:	SYFON BRODZIKOWY KRTY
SK	NÁVOD NA MONTÁŽ:	SIFÓN VANIČKOVÝ
NL	MONTAGE INSTRUCTIE:	DOUCHESIFON MET AFDEKPLAAT
SW	MONTERINGSINSTRUKTION:	AVLOPPSSATS FÖR DUSCH
RO	INSTRUCȚIUNI DE MONTAJ:	SIFON CĂDIȚĂ
DK	MONTERINGS ANVISNING:	AVLØPS SETT FOR DUSJ
UA	ІНСТРУКЦІЯ З МОНТАЖУ:	СІФОН ТА ТРАП
NO	MONTERINGS ANVISNING:	AVLØPS SETT FOR DUSJ

71 / R5 / 06 / 13 / S195

A49B
A49CR
A49K

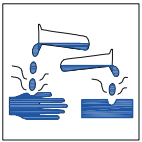

ŽIRAVINA/CAUSTIC

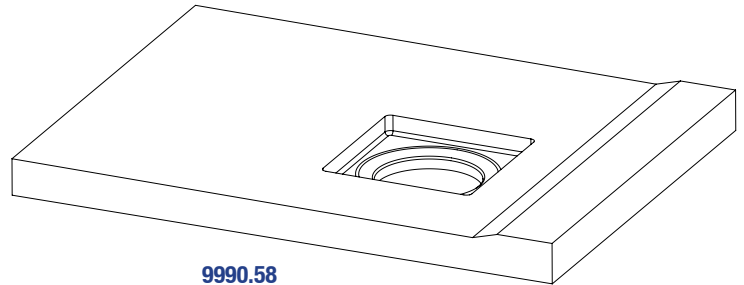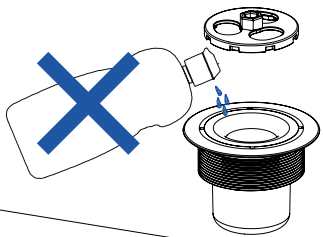



9990.58

9990.21

9960.28

9990.19a

9990.64

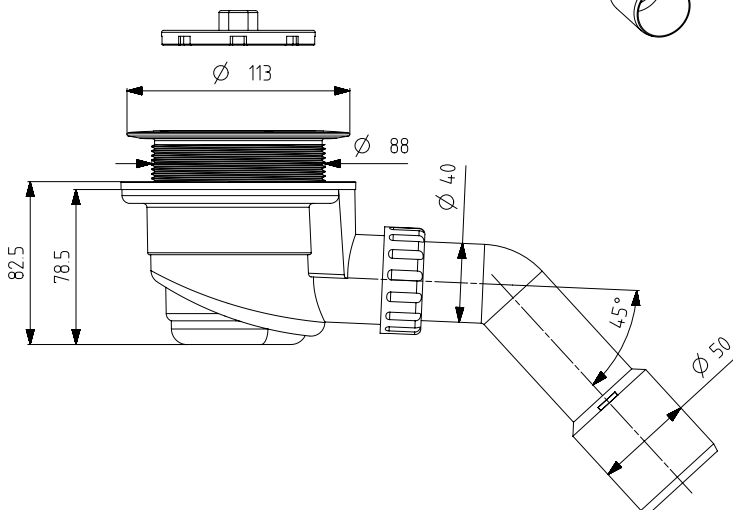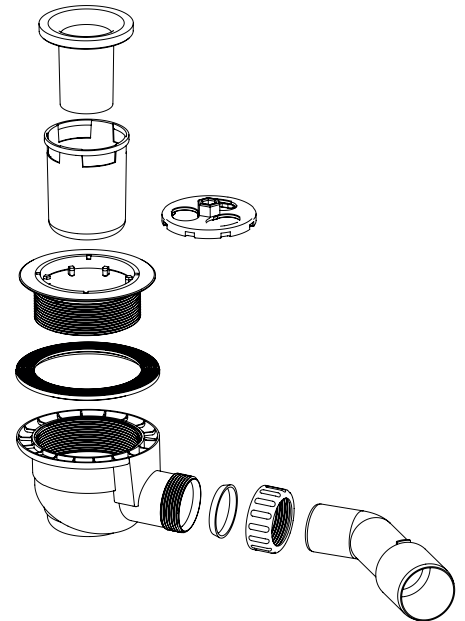

CE

Sanswiss AG
Lerchenbühl 3
CH-4624 Härkingen
20

DoP Nr. : ST - 001
ST

PH
EN 14527:2006+A1:2010
CA - DA

www.sanswiss.com

VER3