


DE Montageanleitung  
FR Notice de montage  
GB Installation instructions  
CZ Montážní návod

# SCREEN PRO

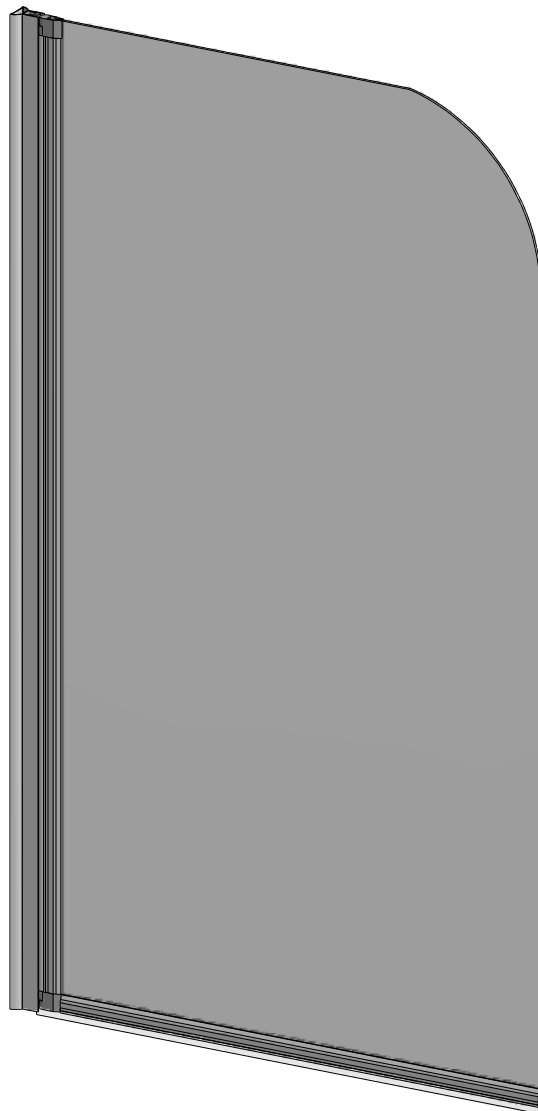


1. 1x




2. 1x  
ND01-3308-2AE



4. 3x  
Ø6  
M0511

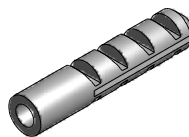


5. 3x  
Ø3,5x32  
M0794

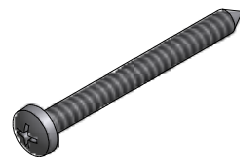

6. 3x  
Ø3,5x11  
M0806




7. 3x  
M0669

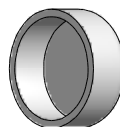

8. 3x




3. 1x  
ND01-3297

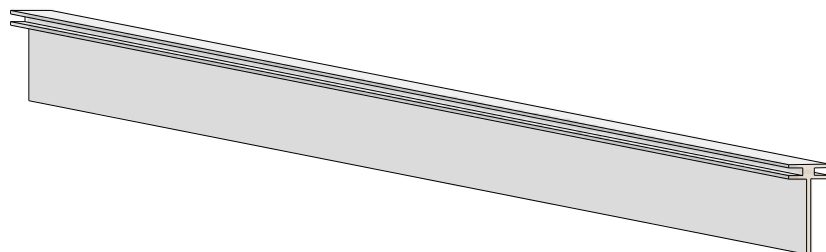

9. 1x  
M0838  
n2,8




TOOL

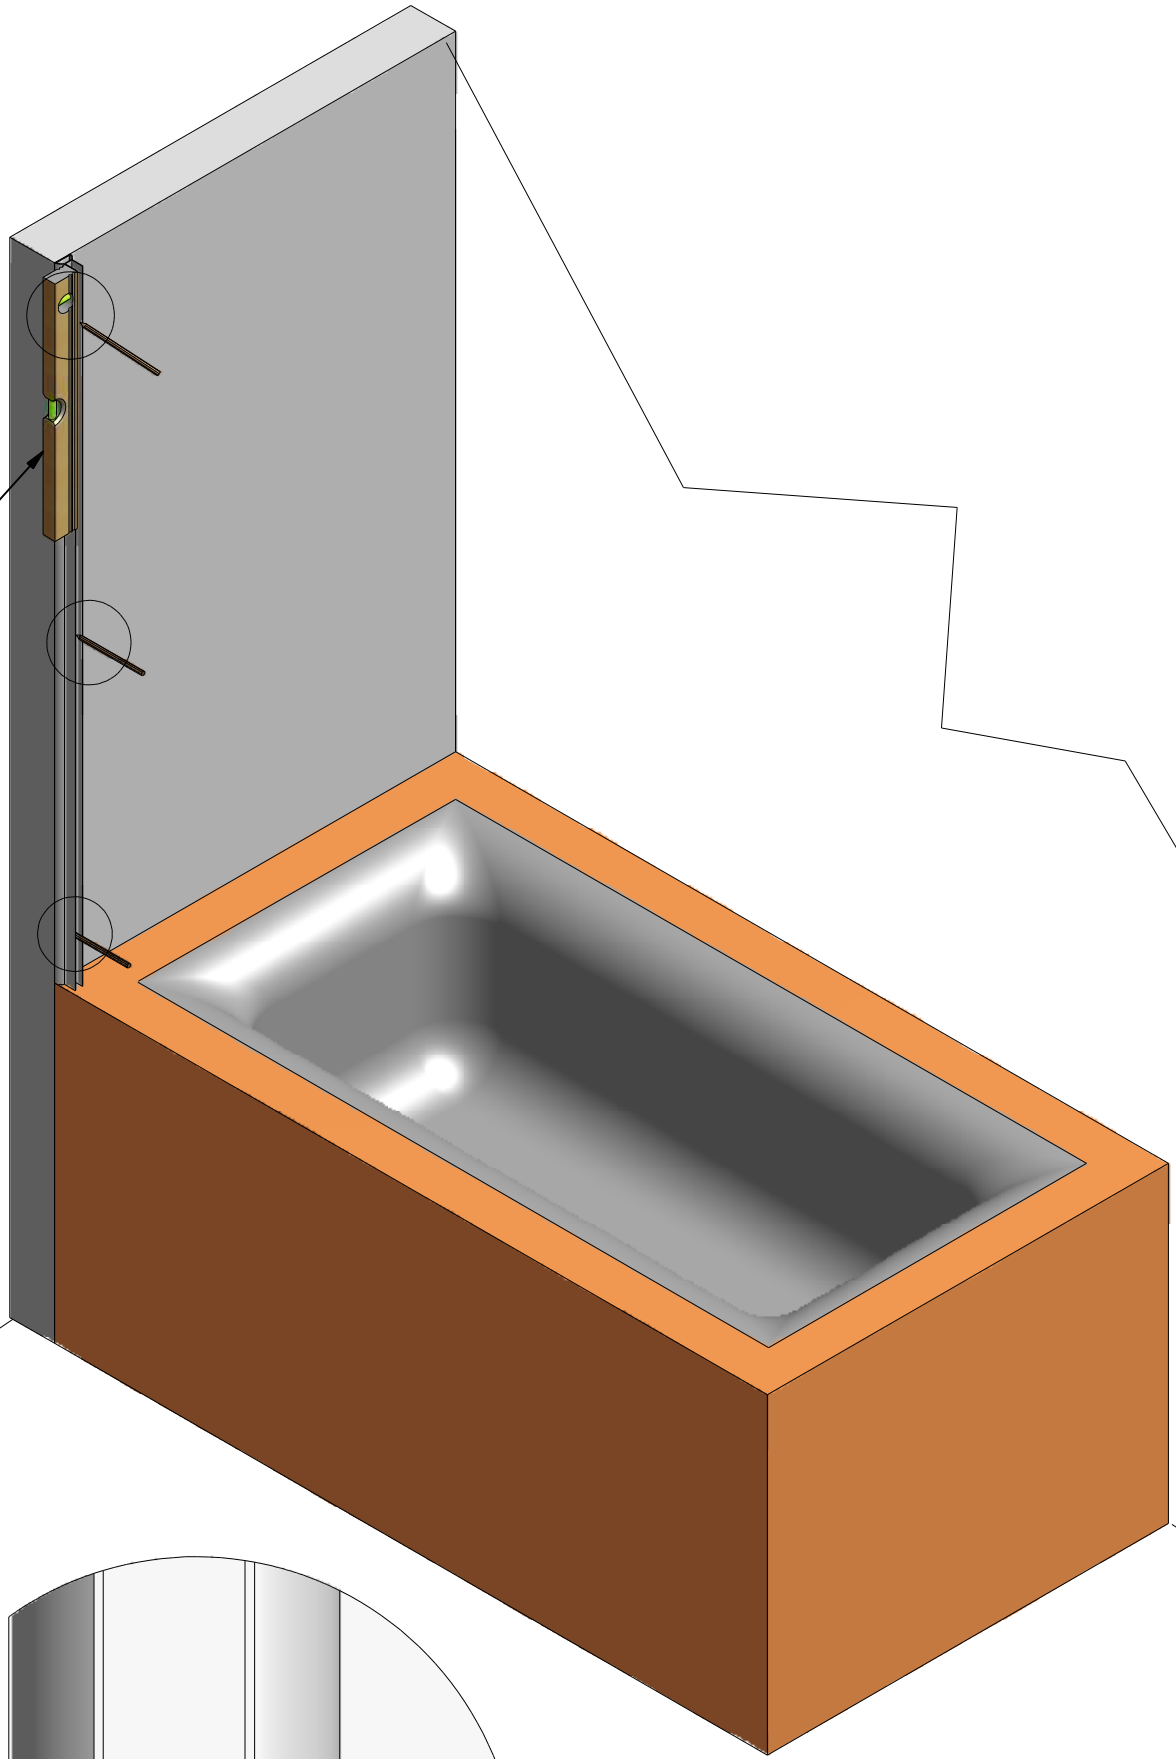



A



2.

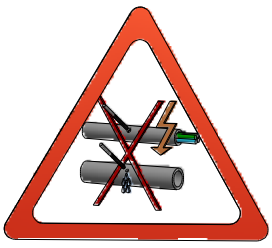


**B** 3x

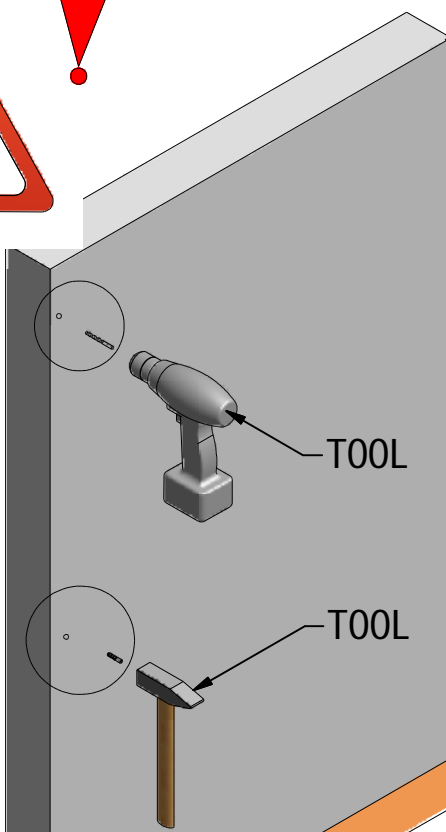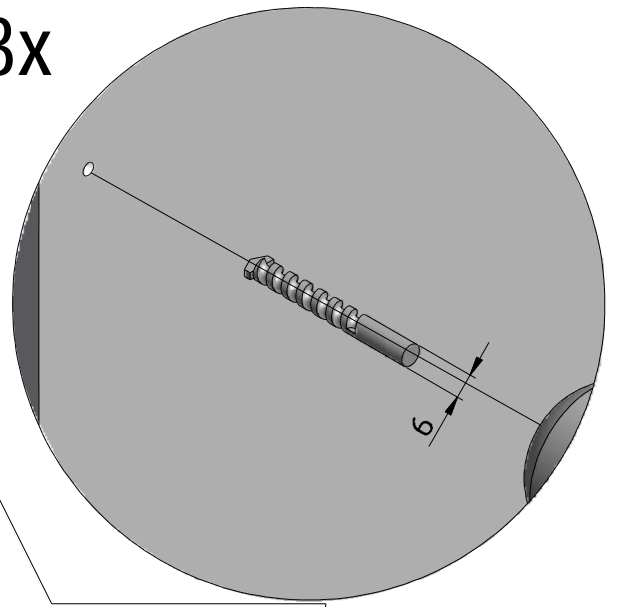

TOOL


TOOL

**C** 3x


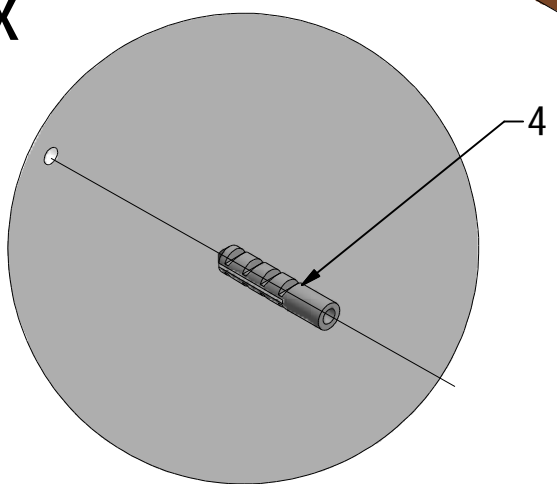


4


**D** 3x

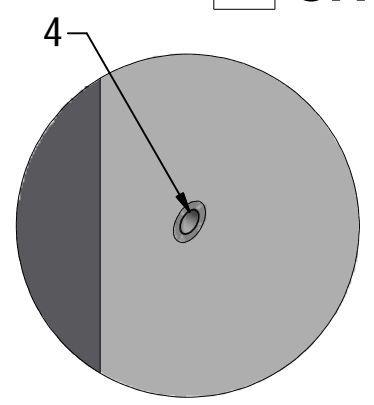


4

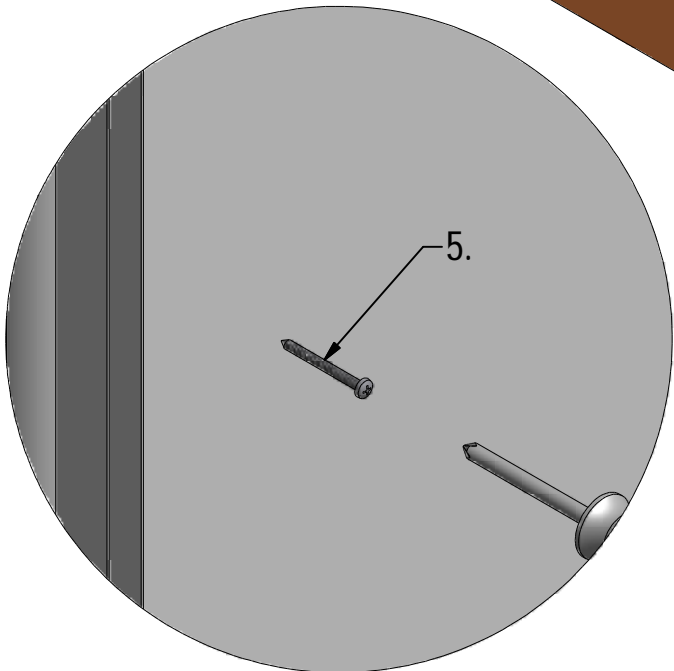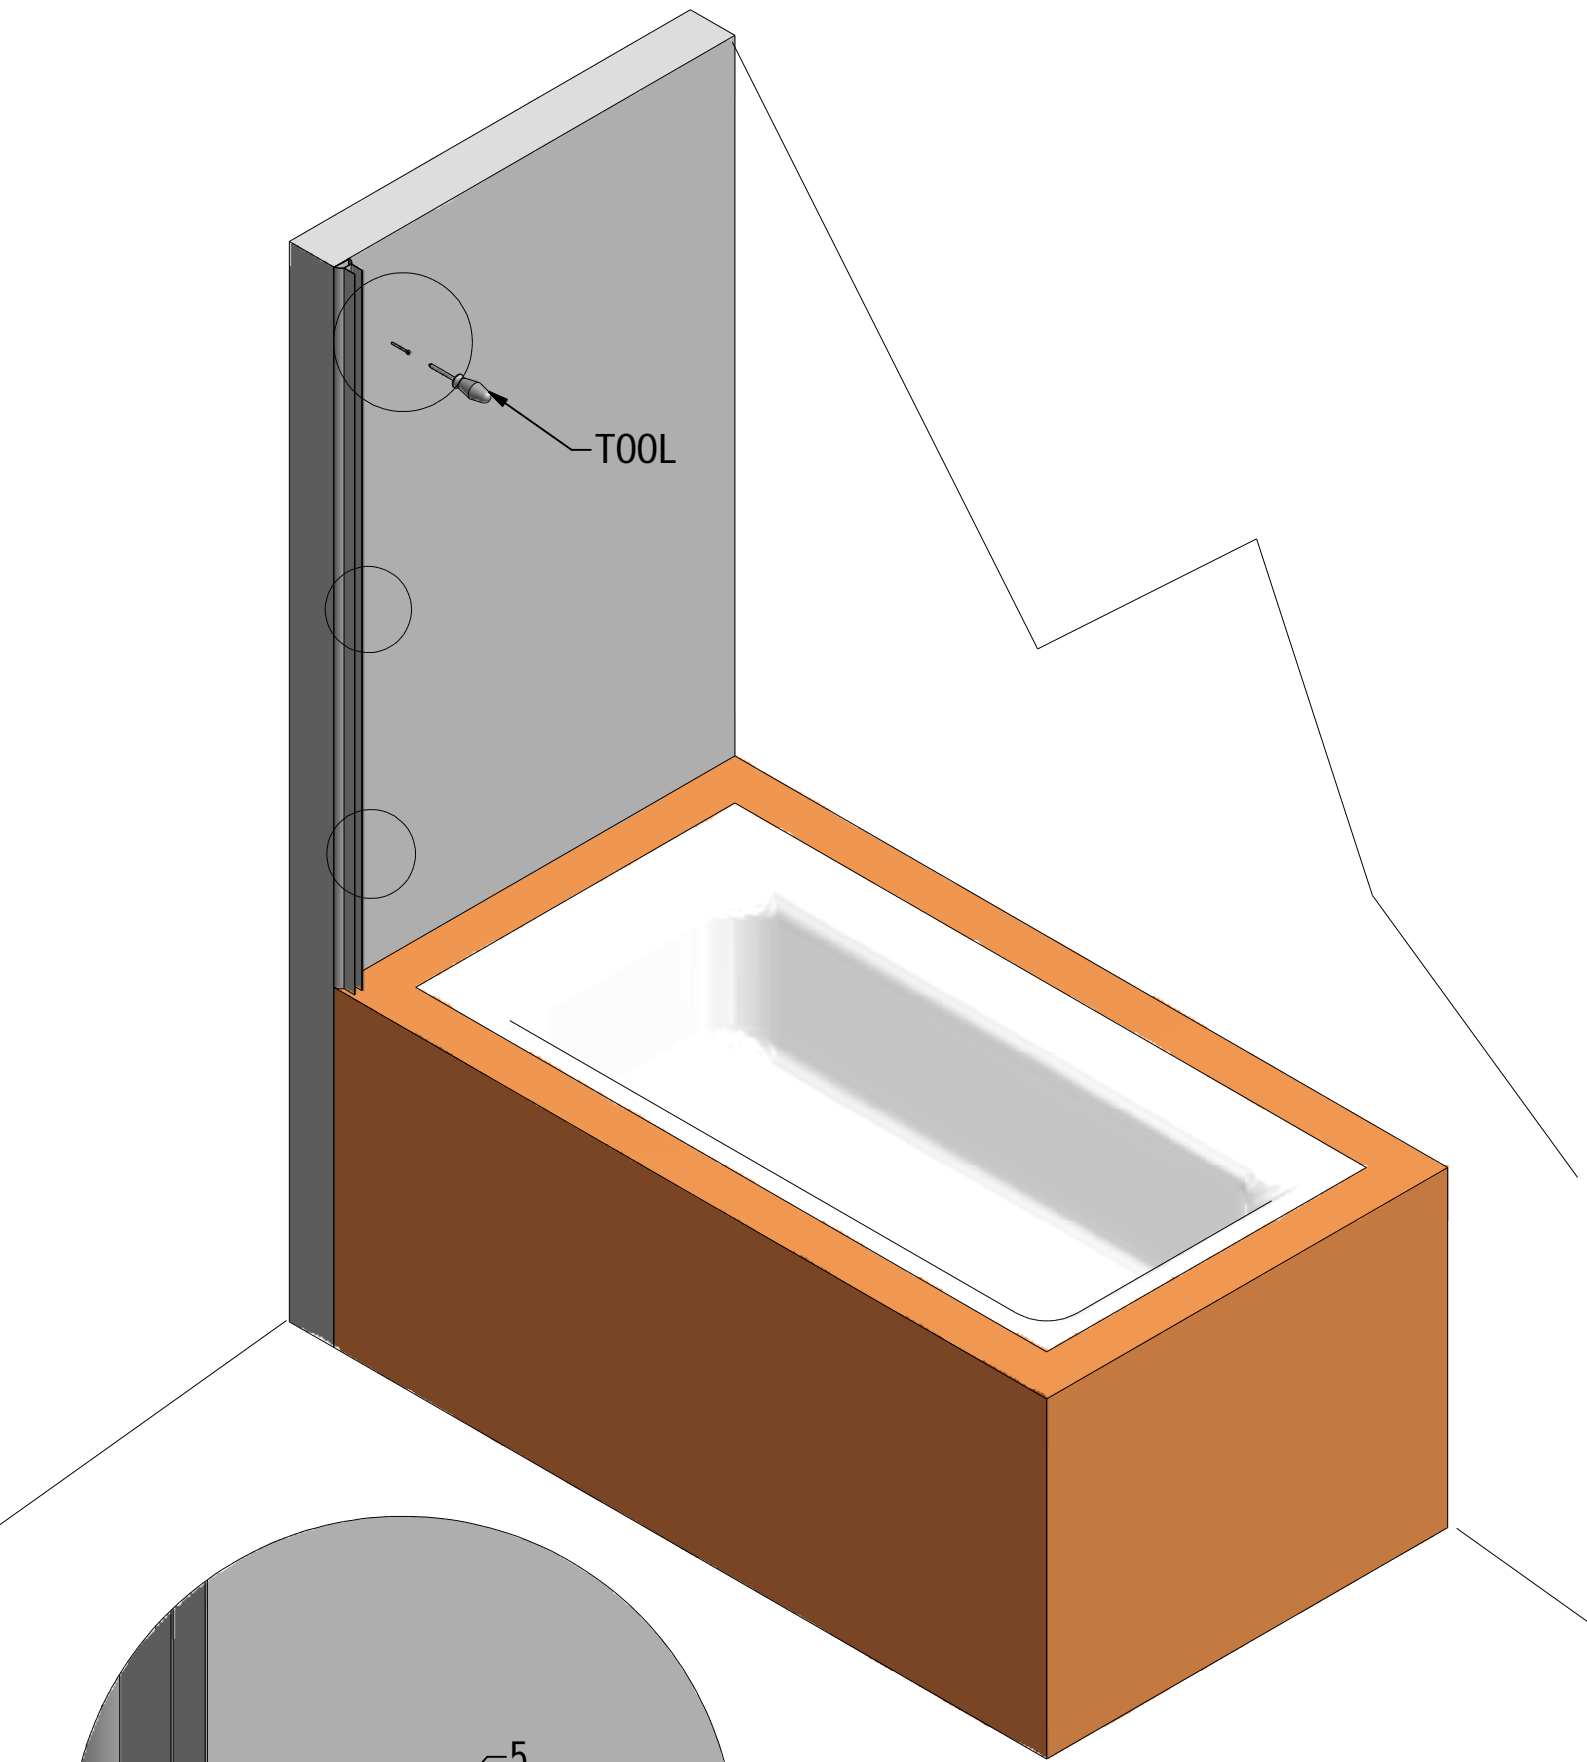

**E** 3x

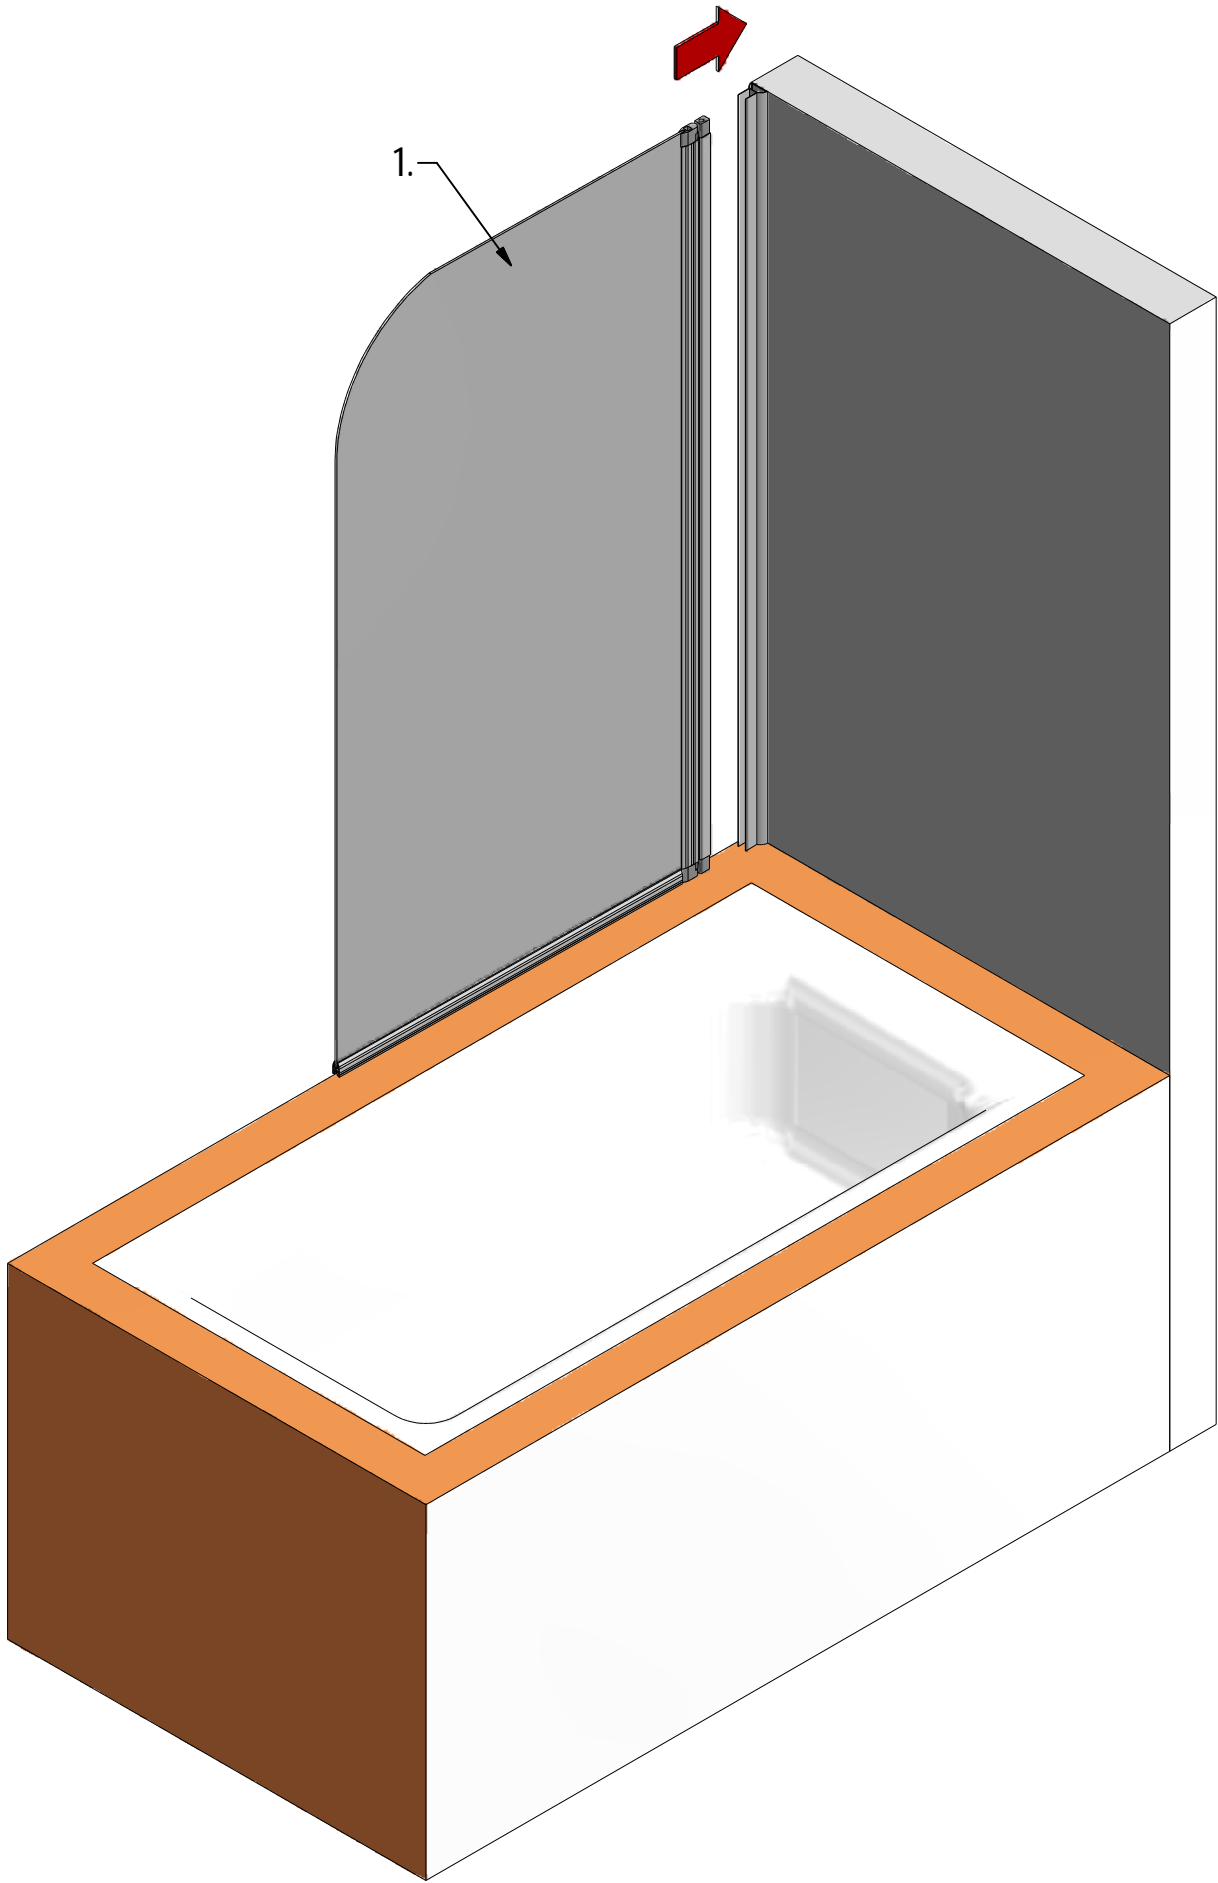

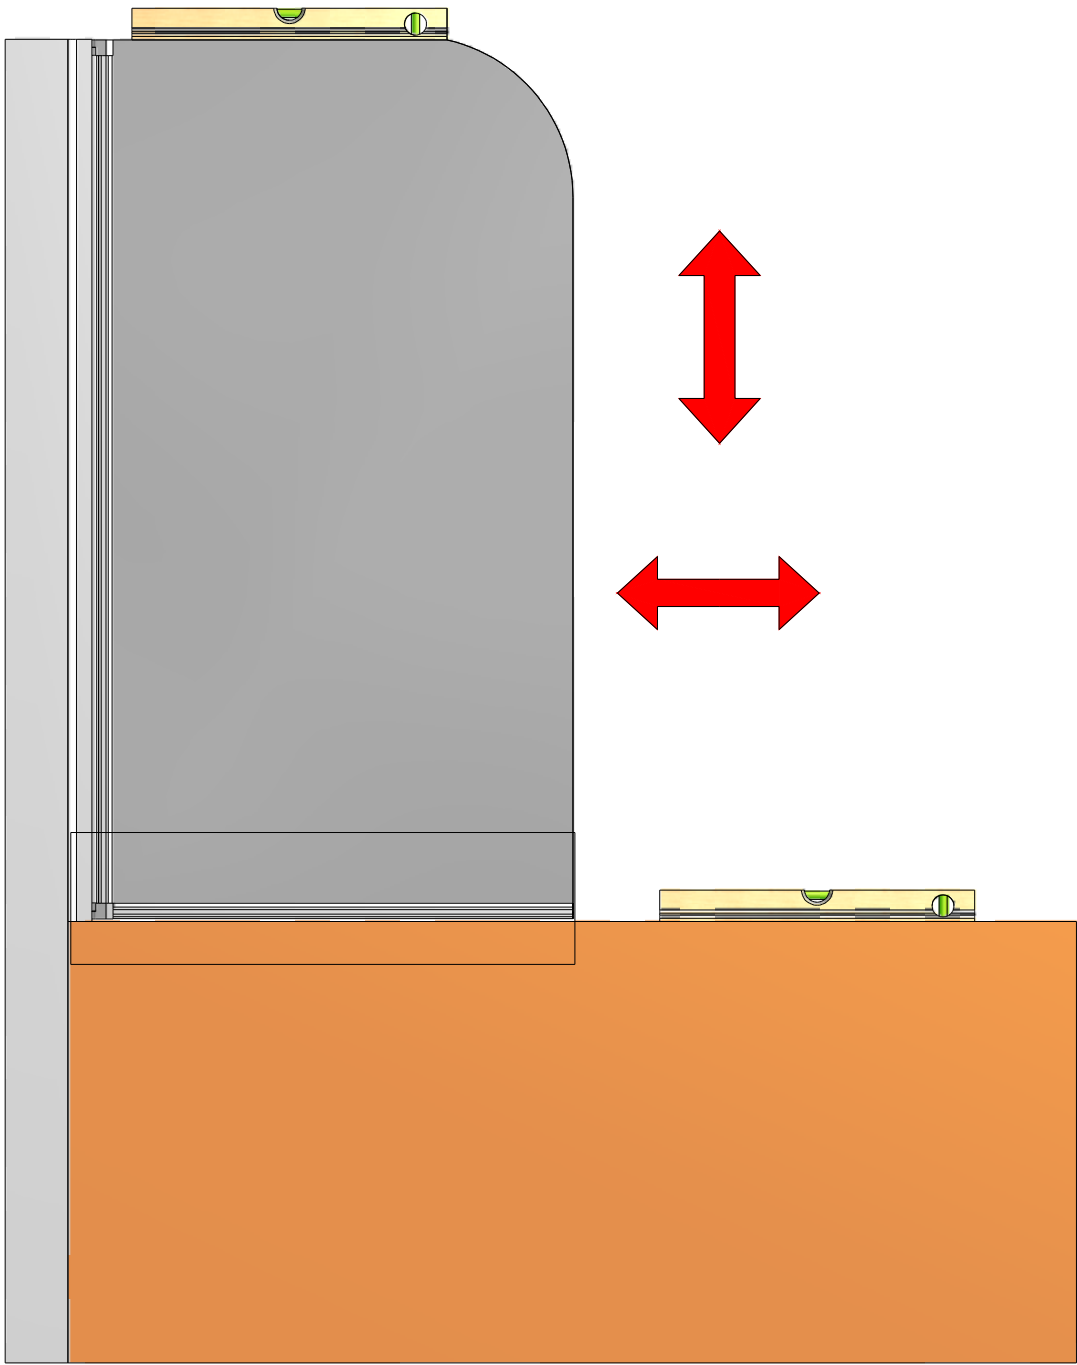

F






a


a

$a = \sim 3-5\text{mm}$


**G** 3x

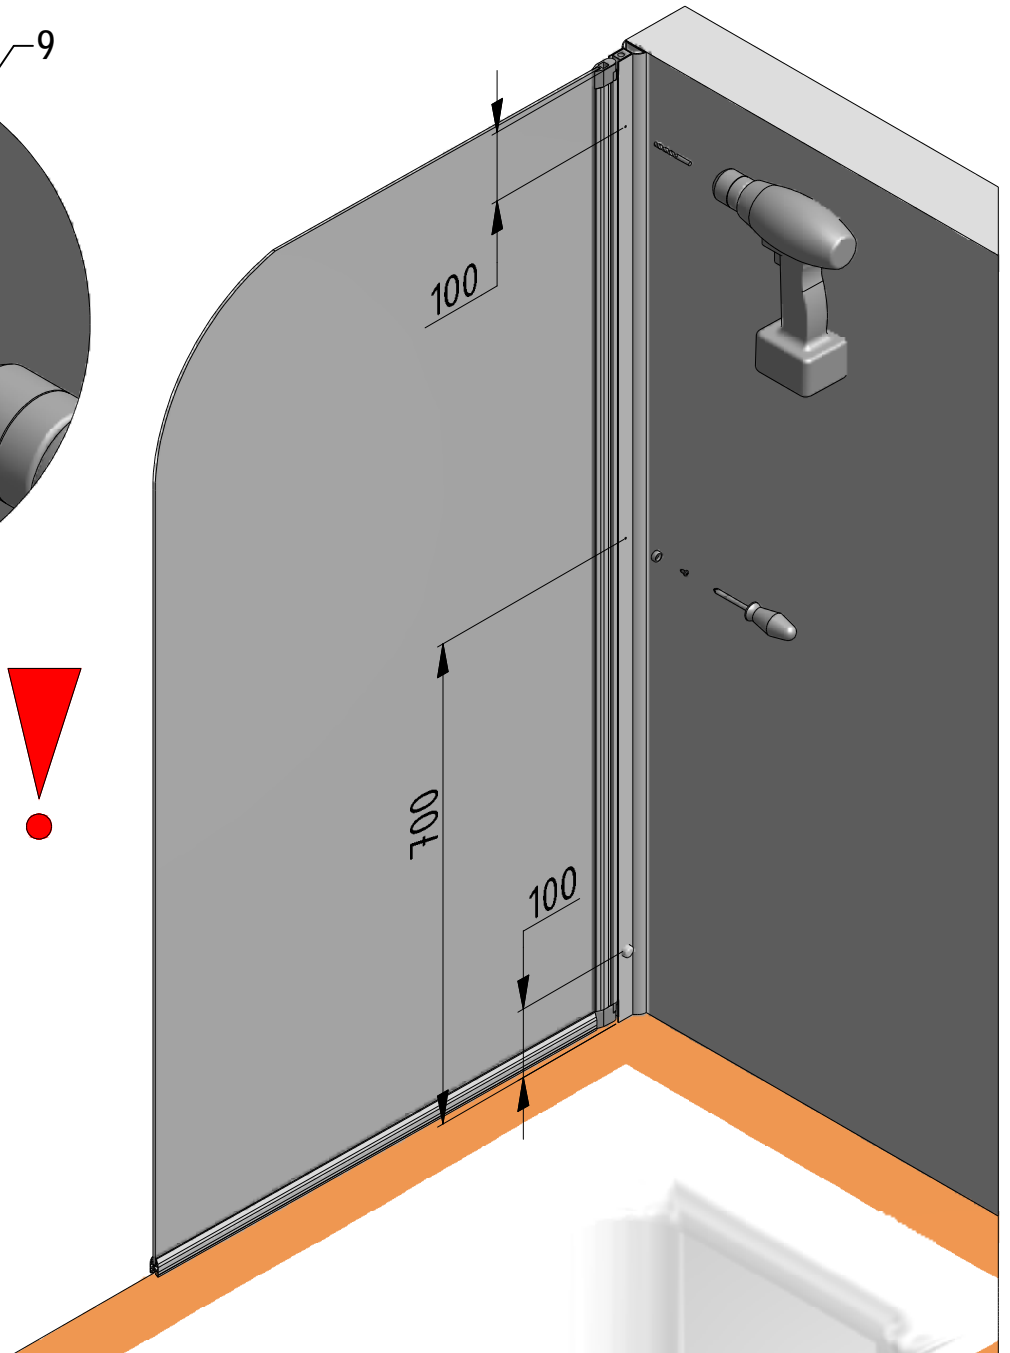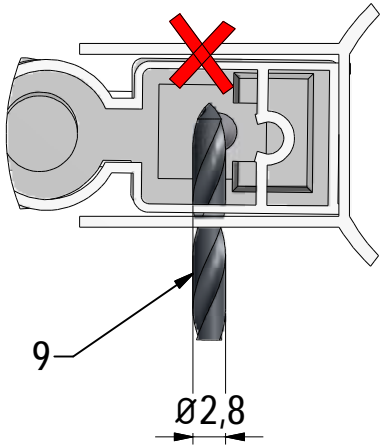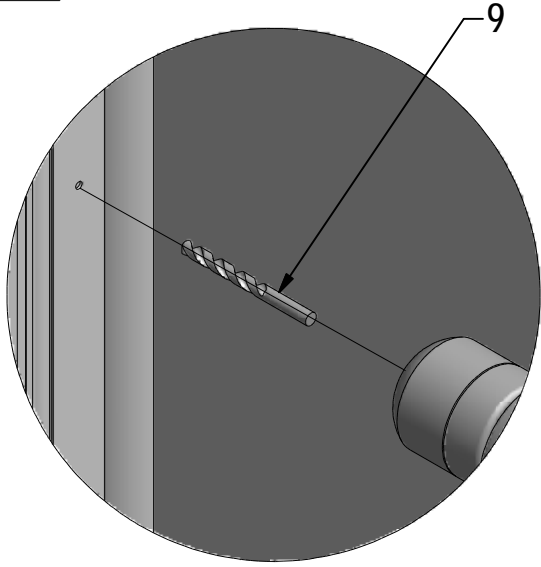


**H** 3x

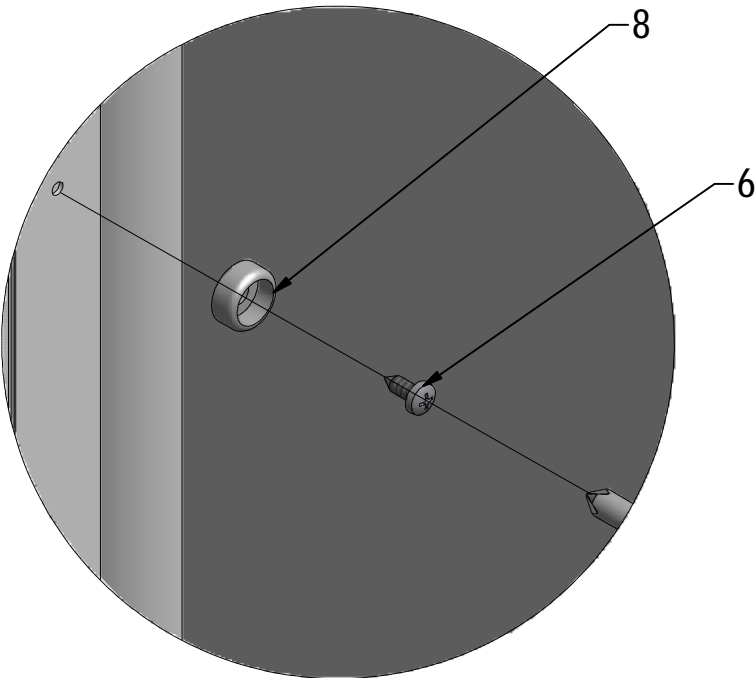





**I** 3x

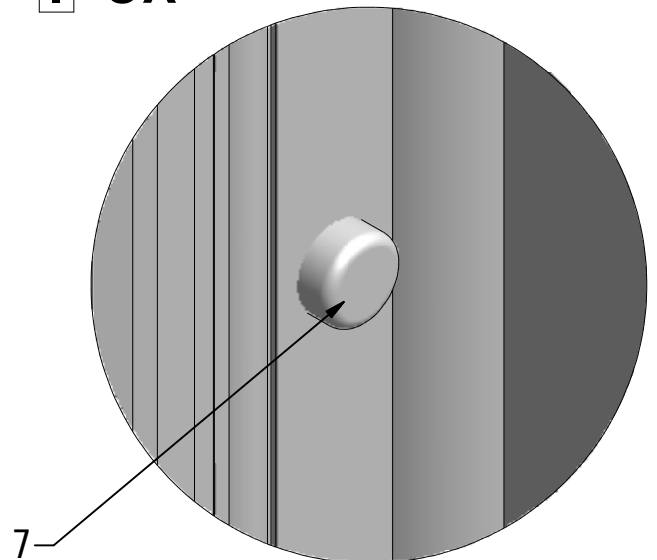




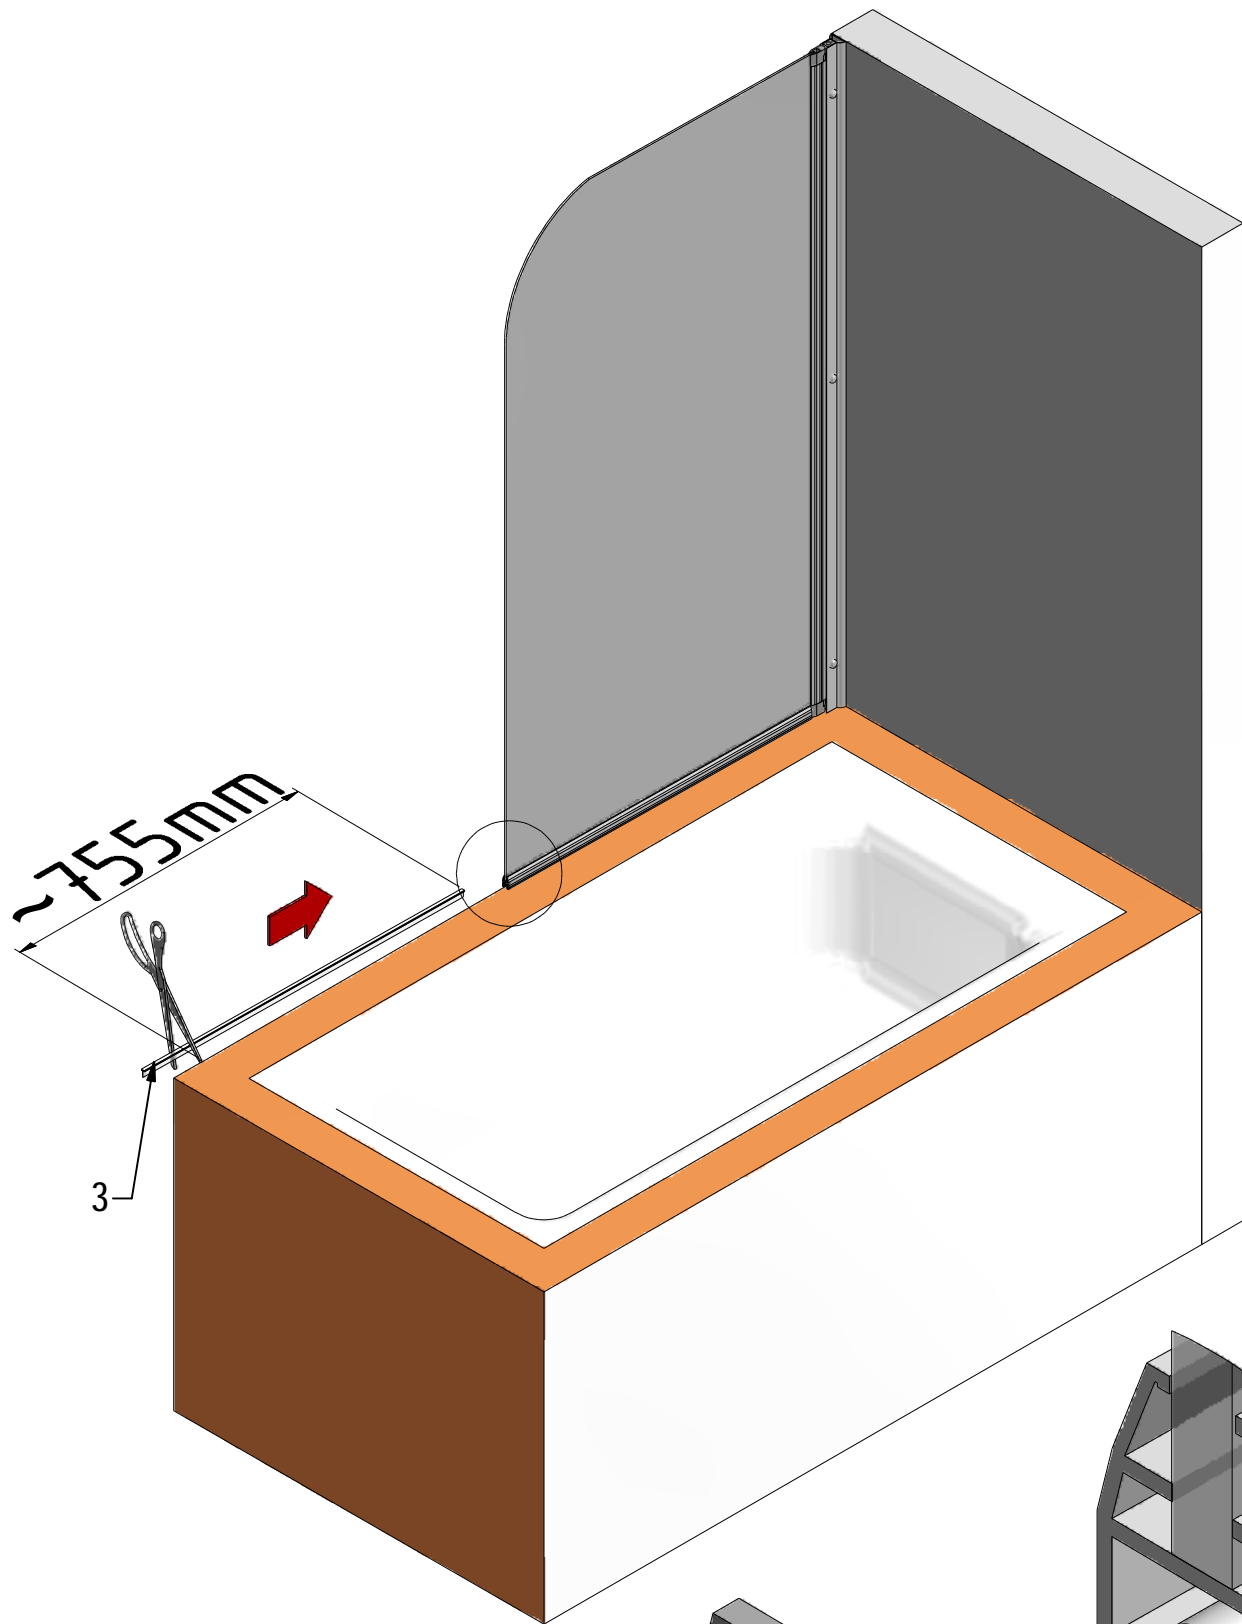

J

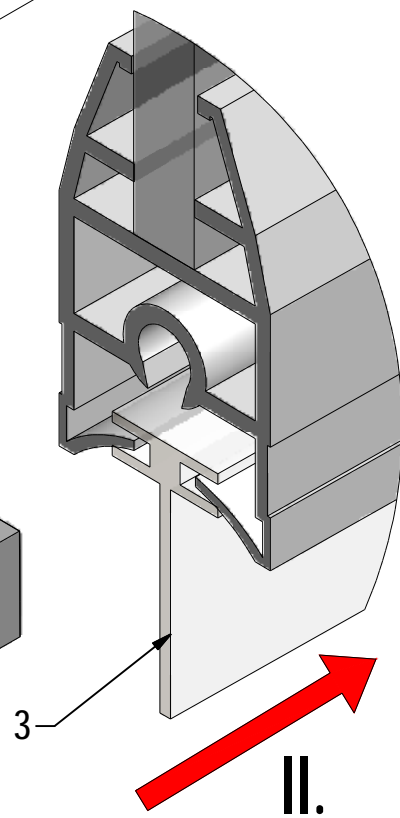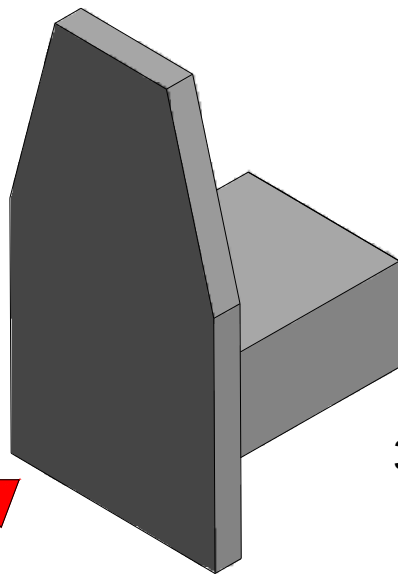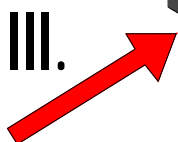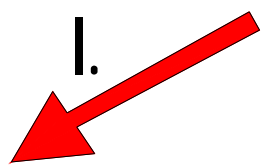

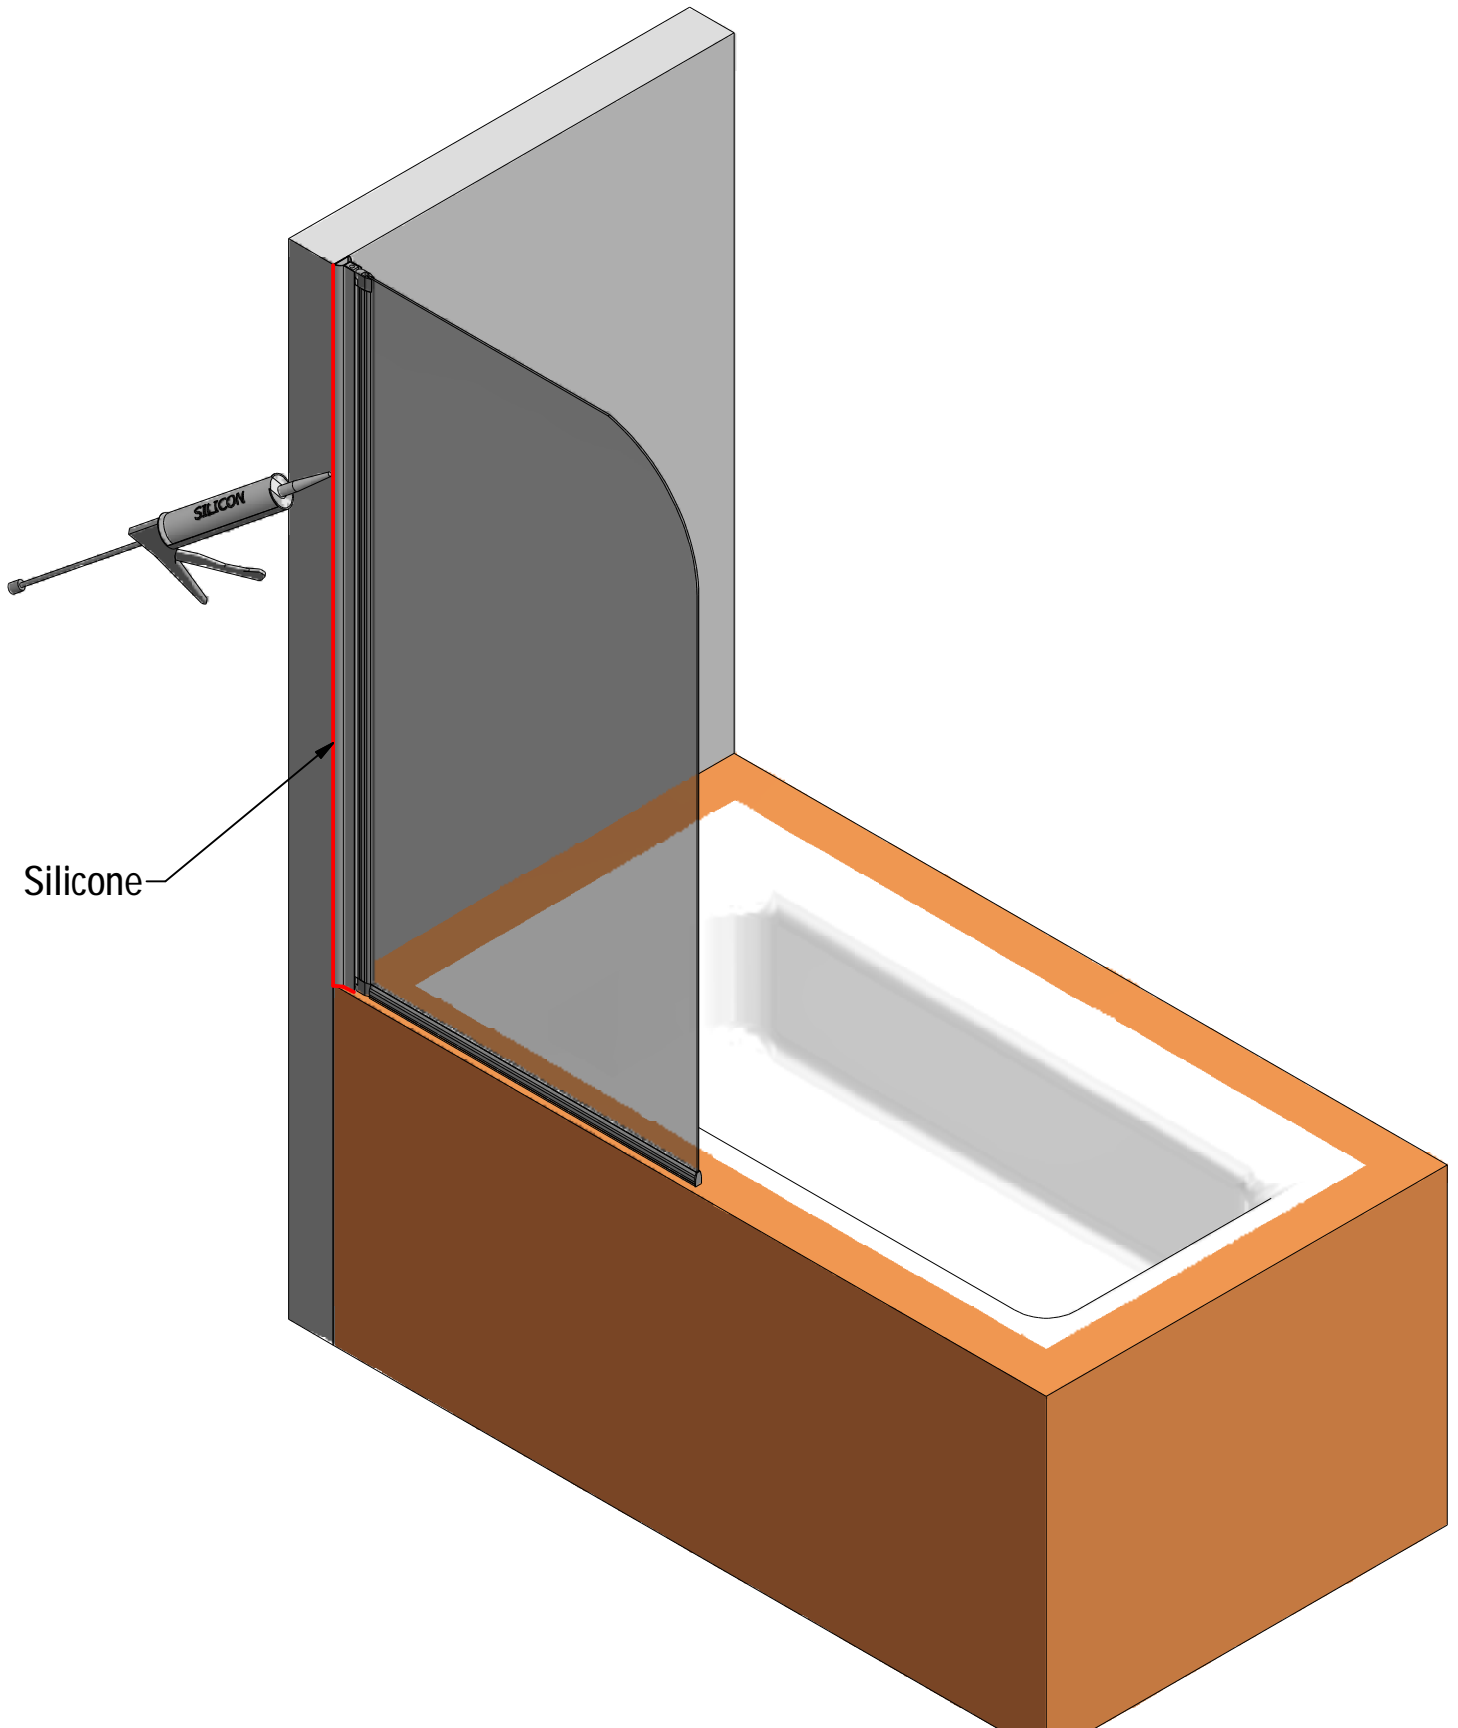

Silicone

