



# Installation instructions

Freestanding marble bathtubs

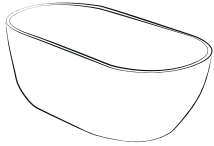





## REDUTA H

71843 71842  
71974 71973

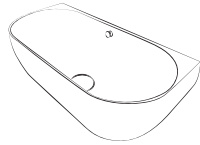






## PAGODA

72976  
10281

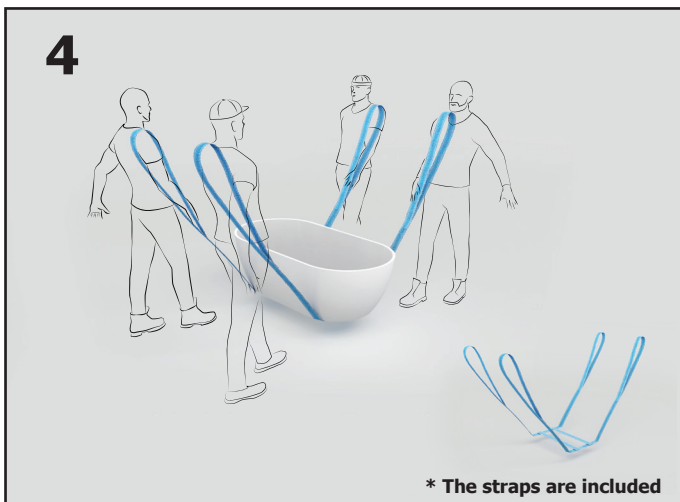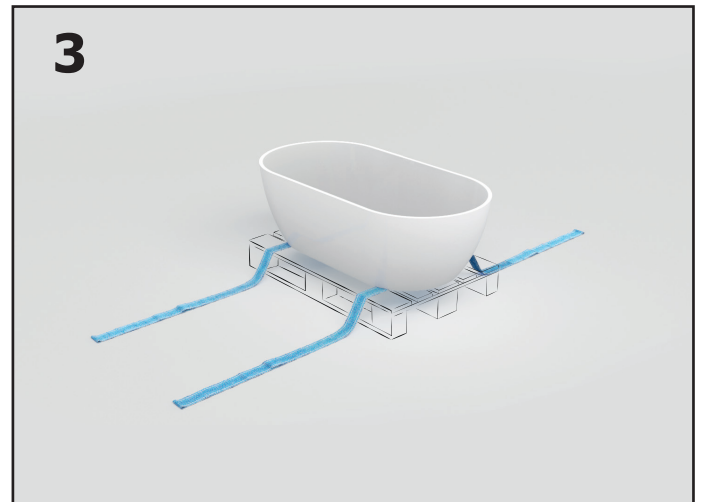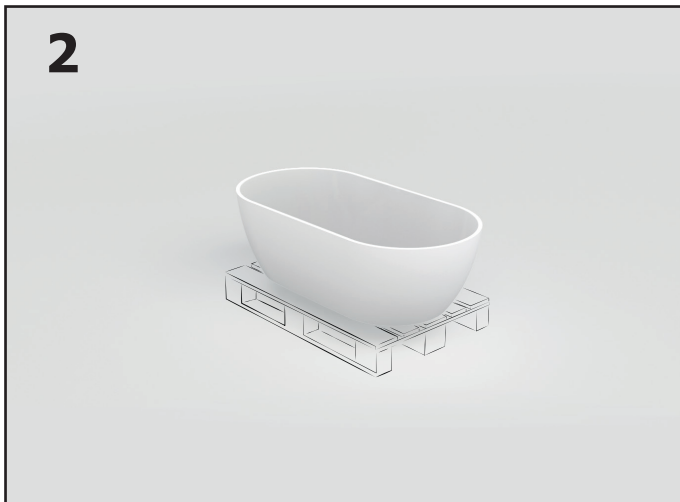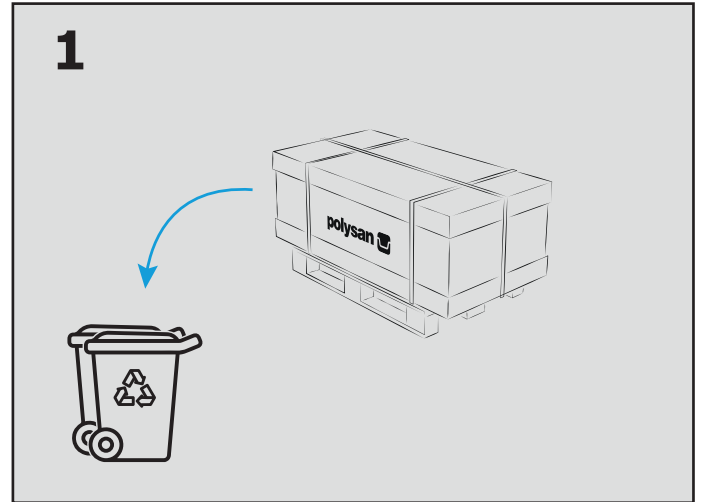

# Installation instructions

Freestanding marble bathtubs

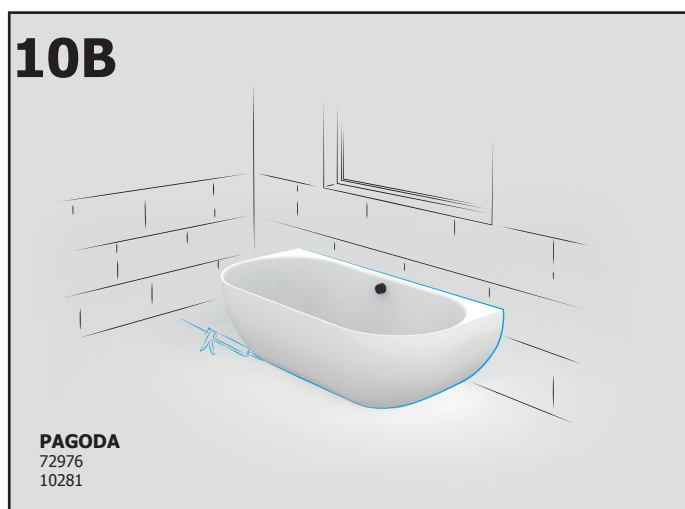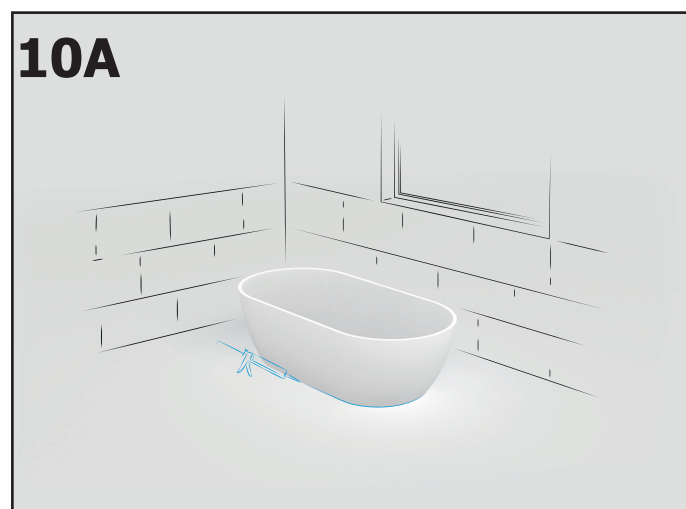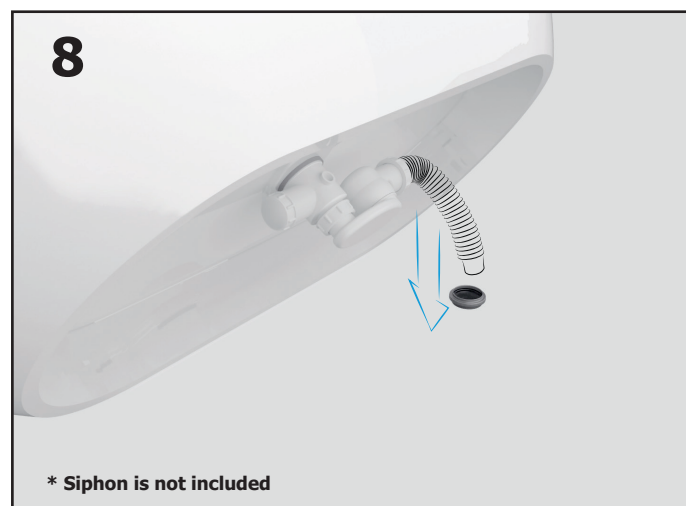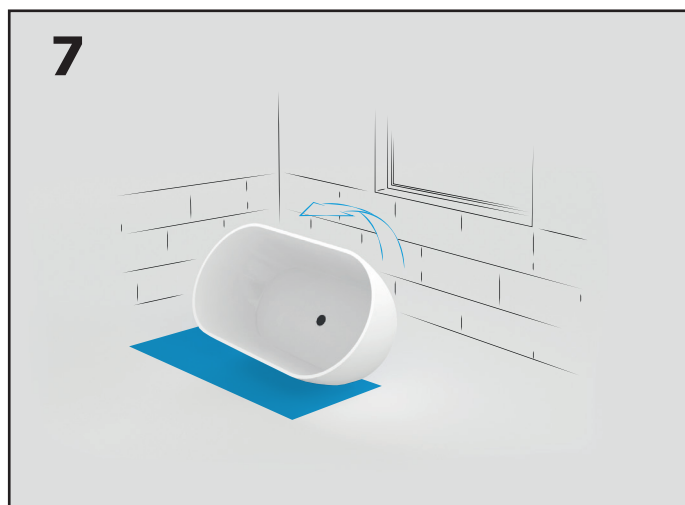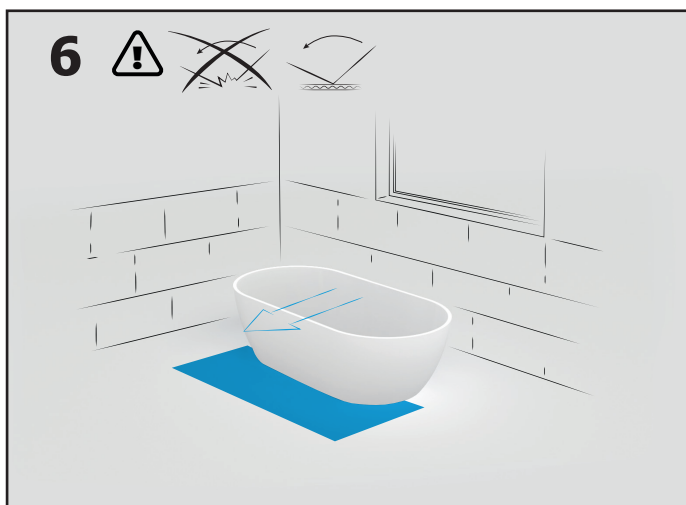

**polysan** 

Polysan s.r.o.  
Nesměřice 52  
285 22 Zruč nad Sázavou

tel.: +420 327 585 981  
e-mail: info@polysan.cz  
www.polysan.cz